

my chest freezer.
my quick start guide.

mykin.

getting me started.

TEMPERATURE CONTROL

Your chest freezer has one control for regulating the temperature. The temperature control is located on the lower right hand corner (see below: ⑤).

The range of the temperature controls range between:

- **1** The warmest
- **6** The coldest

The setting of “**4**” should be appropriate for home use.

HANDY TIPS

After plugging the appliance into a wall outlet, allow the unit to cool down for 2–3 hours before placing food in the freezer compartment.


Large amounts of food will lower the cooling efficiency of the appliance.

If you change the thermostat setting, adjust the control by one numerical increment at a time. Allow several hours for temperature to stabilize between adjustments.



Key

- ① Control panel
- ② Power indicator
- ③ Running indicator
- ④ Alarm indicator
- ⑤ Thermostat control

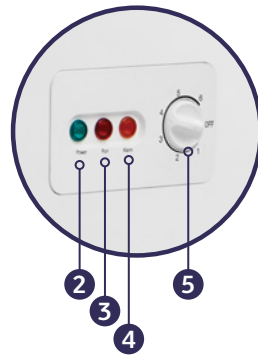

Note: If the unit is unplugged, lost power, or turned off; you must wait 3 to 5 minutes before Restarting the unit. If you attempt to restart before this time delay, the freezer will not start.

Model: MCF99W
Support: 1300 11 4357
www.mykin.house
part of the family

mykin.